

TECHNICAL SERVICE BULLETIN

Part #:	CPP-04162022	Engine:	Cummins
Date:	04-16-2022	Title:	Cummins Priming Procedure

Prime your engine with an oil priming tank before starting or checking for oil pressure. Failure to pre-prime your engine will result in bearing damage.

1. Fill you oil filter full with oil and install.
2. Prime your engine with a pressurized oil priming tank through the oil pressure sensor location being careful not to run the tank out of oil. Put your engines oil capacity worth of oil into the engine using the priming tank.
3. Remove the pressure regulating valve pipe plug and fill the oil cooler housing with oil using a funnel.

Failure to follow these instructions will result in bearing damage.

